

4.1.1 TECHNICAL DATA

MAX OPERATING PRESSURE (PS): (carbon steel) 220 - 250 - 350 -

375 bar;

upon request, pressures up to 2000 bar;

(stainless steel) upon request

PRESSURE TEST (PT): 1.43 x PS

NOMINAL CAPACITIES: 0.1 ÷ 1000 litres

WORKING TEMPERATURE: - 60 ÷ +150 °C

COMPRESSION RATIO (Po: P2): (V0-V) · P2 /V0 · P0

FLUID VISCOSITY RANGE: 10 ÷ 400 cSt

RECOMMENDED VISCOSITY: 36 cSt

FLUID CONTAMINATION DEGREE:

class 20/18/15 according to ISO 4406/99

BODY MATERIAL:- carbon steel pipe painted

with a coat of rust inhibitor (70µ) RAL 8012

- nickel coating 25 - 40 μ

- stainless steel AISI 316L

FILLING VALVE MATERIAL:

- galvanized carbon steel in compliance with Directive 2002/95/EC (RoHS) to resist to corrosion.

- stainless steel AISI 316L

SEALS MATERIAL:

- P = Nitrile rubber (NBR)
- **U** = Polyurethane (HPU)
- **K** = Hydrogenated nitrile (HNBR)
- **V** = Fluorocarbon (FPM)
- T = Teflon (PTFE)
- S = Silicon-fluorine (MFQ)

See Table 4.1c and/or Chapter 1.5


FILLING VALVE CONNECTION:

- 5/8" UNF - M28x1.5

FLUID PORT CONNECTION: upon request, see Table.


FLOW RATE: see Table 4.1d

WEIGHT: see Table 4.1d

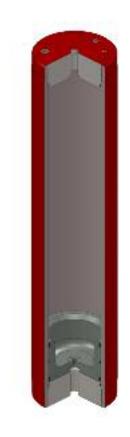

4 1a

4.1.2 HYDRAULIC SYMBOL

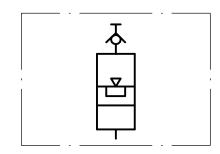

4.1b

4.1 FO4-11 PISTON ACCUMULATORS



4.1.3 PISTON ACCUMULATOR ADVANTAGES

- application solution for versatile choice of diameter and length
- ability to monitor the position of the piston and find out the amount of fluid inside the accumulator
- any mounting position
- various types of profile and material of the seals for every type of application and compatibility with the fluid
- performance greater than the other types of accumulator
- very low permeability of the seals
- aluminium piston for high dynamics
- connections up to 4"
- possibility to plan an intervention in case of loss of the seals as the seals can wear out slowly, not suddenly as could happen with a bladder accumulators.

4.1.4 DESCRIPTION

Definition and Functionality

The hydropneumatic piston accumulator is a device used to exchange energy using the hydraulic system to which it is connected.

At given moments, it lets energy escaping, the it accumulates it as pressure gas energy and, finally, it readily and integrally replenishes the system on demand, returning to the conditions of receiving again.

The piston accumulator consists particularly of two chambers, one of which is filled with gas under opportune pressure and the second one is connected to the hydraulic circuit.

The gas pressure must be chosen in relation to the conditions of the accumulator work and represents the pre-charge pressure.

Constructional features

The piston accumulator consists of a steel cylinder, closed at both ends, in which slides an airtight aluminium piston.

This divides the internal of the cylinder in two chambers, one filled with pre-charge gas and the other with oil or, generally speaking, with fluid from the system (Fig 1).

- The piston is made of aluminium in order to have rapid response time and not to generate pressure peaks during rapid cycles. For lighting purposes, it's also provided with cavity, visible in Fig 1. facing the gas chamber in order to increase the accumulation volume. Even the surface in contact with the oil has a concave cavity. The purpose of this cavity is so that the oil pressure acts on almost the entire surface of the piston and not only on one spot when the piston is against the bottom end cover in the oil chamber.
- Seal between piston and cylinder is guaranteed by a special multiring seals, which constitute the key characteristic elements for the efficiency of the accumulator. This type of seal has allowed the piston accumulator to have essential characteristics regarding air lightness, component longevity and stroking. In fact, the differential pressure necessary to move the piston, which relates directly on the response speed of the accumulator, is contained in moderate values, contrary as occurs in most seals for standard pistons.

The maximum operating temperature with polyurethane seals is 80°C. It is possible to operate at temperatures up to 150°C, using Viton® seals and reduced piston, as the expansion factors of aluminium and steel are different; it is therefore necessary to compensate the thermal effect. It is also possible to use Teflon® gaskets for low temperatures (lower than -60°C) or for low friction applications.

In piston accumulators, the duration and number of operations carried out without evidence of changes in pressure exceeding 5% of the precharge value overcome, without penetration, certain quantities of oil in the gas chamber.

It is usually preferable to assume the change of pre-charge as a parameter for evaluating the longevity of the accumulator as long as this check is carried out rapidly and simply.

Through practical results, obtained by application experience, as well as laboratory tests, it was proved that 1,000,000 operations can be achieved without maintenance or recharge intervention.

• The cylinder body of the accumulator is made of low carbon steel, according to the mechanical characteristics of 97/23/EC.

The internal surface of the cylinder is honed to 0.2 micron of roughness. For special reasons, the cylinder and end covers can either be superficially treated or made of stainless steel.

- The gas side end cover is screwed to the cylinder body; the seal is guaranteed by a toroidal gasket, complete with anti-extrusion ring. In the standard version, this end cap has a threaded seat in which the pre-charged valve is placed.
- The oil side end cover is also screwed to the cylinder body and is complete with relative seal.

This end cap has a coupling to connect it to the system, either threaded or flanged, in accordance to the customer requirements. Fig. 1

· All the accumulators manufactured by EPE are tested according to PED standards.

The accumulators are tested at PT pressure which is equal to the maximum working pressure PS, multiplied by 1.43, which allows to verify the absence of defects, which could cause flaws and deformities in the cylinder and in the piston or gas or oil leak from the seals, threaded sections or valve.

The relieve pressure exceeds 1150 bar for model types, designed to work at a maximum pressure of 375 bar.

Gas Valve

End cap gas

Sealing System

Piston

Cylinder

End cap oil side

Fluid connection

4.1.5 EUROPE MARKET

All hydraulic accumulators are pressure vessels and are subject to the national regulations and directives valid at the place of installation.

Piston accumulator, up to and including 1 litre, must not be CE marked. For piston accumulator type AP, greater than 1 litre, every shipping batch is complete of a conformity declaration and instruction of use and maintenance and/or all documents requested.

All vessel categories (see Table 5.1d) must be protected by means of a pressure relief valve in accordance with Directive 97/23/EC.



4.1.6 SEALS-TEMPERATURE-LIQUID COMPATIBILITY

When selecting the accumulator variant, pay attention to the following non-binding notes with regard to hydraulic fluid, seal material and the permissive temperature range.

Code letter	Polymer	ISO	Temperature range (°C)	Some of the liquids compatible with the polymer
Р	Standard nitrile (Perburan)	NBR	-20 ÷ +80	Aliphatic hydrocarbons (propane, butane, gasoline, oils, mineral greases, diesel fuel, fuel oil, kerosene), mineral greases and oils, HFA - HFB - HFC fluids, many dilute acids, alkalis, saline solutions, water, water glycol.
U	Poliuretane	NPU	-20 ÷ +80	The same as with standard nitrile + a number of different types of Freon. (This contains less acrylonitrile than the standard and is therefore more suitable for low temperatures, but its chemical resistance is slightly lower).
K	Hydrogenated nitrile	HNBR	-30 ÷ +130	The same as with standard nitrile but with excellent performance at high and low temperatures.
V	Fluorocarbon	FPM	-10 ÷ +150	Mineral oils and greases, non-flammable fluids of HFD group, silicone oils and greases, animal and vegetable oils and greases, aliphatic hydrocarbons (gasoline, butane, propane, natural gas), aromatics hydrocarbons (benzene, toluene), chlorinated hydrocarbons (Tetrachloroethylene, carbon tetrachloride), fuel (regular, super and containing methanol), excellent resistance to ozone, weathering and aging.
Т	Teflon		-60 ÷ +100	Hot water up to 100°C, glycol-based brake fluids, many acids and bases, salt solutions, polar solvents such as alcohols, ketones and esters, polyglycol-based hydraulic fluids (HFC fluids) and bases of esters of phosphoric acid (HFD-R fluids), silicone oils and greases, Skydol 500 and 7000, resistance to ozone, aging and weathering.
F	Low temperature nitrile	NBR	-40 ÷ +70	The same as with standard nitrile + a number of different types of Freon. (This contains less acrylonitrile than the standard and is therefore more suitable for low temperatures, but its chemical resistance is slightly lower).
S	Silicon-fluorine		-60 ÷ +100	Hot water up to 100°C, glycol-based brake fluids, many acids and bases, salt solutions, polar solvents such as alcohols, ketones and esters, polyglycol-based hydraulic fluids (HFC fluids) and bases of esters of phosphoric acid (HFD-R fluids), silicone oils and greases, Skydol 500 and 7000, resistance to ozone, aging and weathering.


For other hydraulic fluid and/or temperatures, please consult us.

4.1c







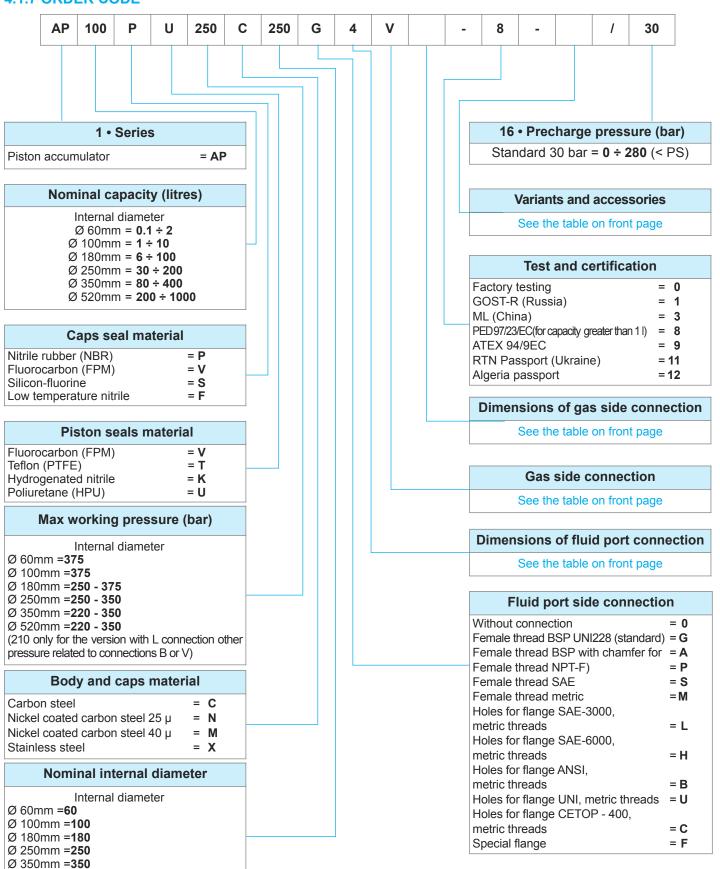

Special variants on request

Ø 520mm = 520



	f fluid port connection f gas side connection
Without connection	= 0
For the type of connection:	
G-A-P-L-H 1/8"	= 1
1/4"	= 2
3/8"	= 3
1/2"	= 4 (std. DN 60)
3/4"	= 5
1"	= 6 (std. DN 100)
1" 1/4	= 7
1"1/2	= 8 (std. DN 180-250-350)
2"	= 9 (std. DN 520)
2"1/2	= 10
3"	= 11
3"1/2	= 12
4"	= 13
S	= Diameter "inch"-Pitch "inch"
Former. 9/16-18 = 9/16-	• •
M	= Diameter/pitch
Former. M 22x1.5 = 22/	
В	= Dimension/Rating
Former. 4" ANSI 300 =	
U DALLOS DALLO	= DN/PN
Former. DN100 PN16 =	
	meter "inch"/max pressure "bar"
Former. 3"Cetop 400 =	
F = to specify and EPE	will assign a number


Gas side connection		
Without connection Pre-charge valve 5/8"UNF (std) Pre-charge valve 5/8"UNF (stainless steel) Pre-charge valve of M28x1.5 Pre-charge valve of 7/8"UNF Pre-charge valve of 1/4"BSP Female thread BSP UNI228 (standard) Female thread BSP with chamfer for Female thread NPT-F) Female thread SAE Female thread metric	= = = = = =	V VX VM V4 V2 G A
Female thread metric Holes for flange SAE-3000, metric threads Holes for flange SAE-6000,metric threads Holes for flange ANSI, metric threads Holes for flange UNI, metric threads Holes for flange CETOP - 400, metric threads Special flange	= = = = =	

Variants and accessories		
Adapter + Burst disk set at xxx bar	=	Rxxx
Adapter + Safety valve, type VS224/TX		
set at xxx bar		Sxxx
Adapter + Needle Valve of 1/4" BSP		EG2
Adapter + Stainless steel needle valve of 1/4 BSF	'=	EG2X
Adapter + Excluding device with full scale		
pressure gauge of xxx bar	=	EM xxx
Adapter + Excluding device of 90°		
with full scale pressure gauge of xxx bar		EMXXX
Flushing with degree of contamination ≤ x 75-80 µ thick polyurethane paint	=	Fx
with colour to be specified	_	W
Off-shore paint with colour to be specified		Z
NORSOK System 1 paint	_	_
with colour to be specified	=	K1
NORSOK System 7 paint		
with colour to be specified	=	K7
Piston in anodized aluminium		P1
Piston in carbon steel		P2
Piston in stainless steel	=	PX
Piston with low friction seal	=	PB
Checking piston displacement:		
Last 150 mm gas side		
add no. of magnetic switches	=	В
(i.e. No.2 magnetic switch = B2)		
Last 300mm gas side		
add no. of magnetic switches	=	С
(i.e. No.2 magnetic switch = C2)		
Last 700mm gas side		_
add no. of magnetic switch	=	D
(i.e. No.2 magnetic switch = D2)		
Gas side exit road with indicator		
add no. of micro switch	=	U
(i.e. No. 3 micro switch = U3) Fluid side exit road with indicator		
add no. of micro switch	_	s
(i.e. No. 3 micro switch = S3)	_	3
Potentiometric internal transducer	=	TP
Magnetostrictive transducer with output 4-20 mA		
4 mA with piston pre-charged	. –	140 120
with nitrogen and without oil	=	T4
20 mA with piston pre-charged		•
with nitrogen and without oil	=	T20
This transducer must be coupled with the oute		
steel pipe, therefore you should add the letter		
It can be also coupled with other control device		
W T		
UT		
ST		
other verients upon request		

other variants upon request



4.1.8 DIMENSIONS

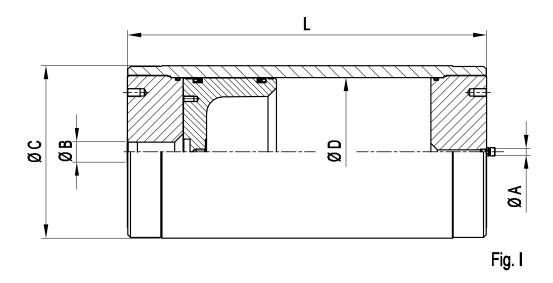

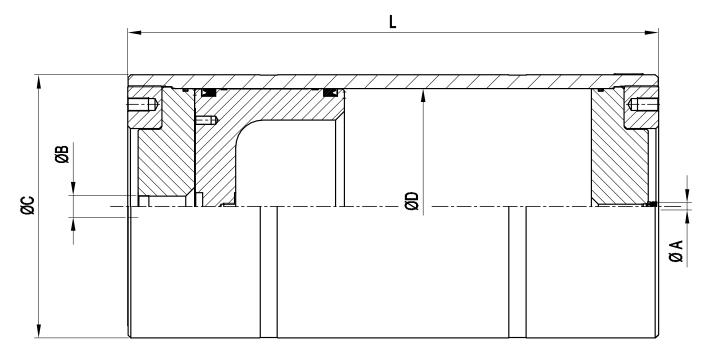


Fig. II

4.1d

^{*} The maximum differential pressure is the maximum allowable difference between the maximum pressure and the minimum working pressure (P2-P1) to have an infinite life cycle of the accumulator (greater than 2,000,000 cycles). ** Flow rate measured using mineral oil with viscosity of 36 cSt at 50°C and ΔP = 5 bar




Accumulator type APXXX	Fig	Effective fluid volume	Gas capacity liters	Working pressure bar	Ped category for the	Maximum differential pressure	ØA	ØB	ØC mm	ØD mm	L	Kg			
Ø bore (ØD)		liters	illers	Dai	liquids of group 2	bar			111111	111111	111111	220 bar	250 bar	350 bar	375 bar
		0,25 0,5	0,3 0,55		Art III (III)						219				5,9
		1	1,05			300	Pre-charge	1/2" BSP	80		307 484				7,8
60		1,5	1,55	375	ll ll	300	valve	1/2 DOF	00	60	66				10,4 13,5
		2	2,05				5/8" UNF			, †	837				17
		1	1,1								308				21,1
		1,5	1,6								372				23,8
		2	2,1		II						435				26,5
		2,5	2,6								500				29,5
		3	3,1	375		000	Pre-charge				562				31,9
		4	4,1	010	III	300	valve	1" BSP	130	100	690				37,3
100	1	5	5,1				5/8" UNF				818				42,7
		6	6,1				3/0 0111				945				48,2
		8	8,1		IV						1200				59
		10	10,1		1						1455				69
		6	7								542		83		97,3
		8	9								620		93,6		105,0
		10	11	250		180,5			220		698		94,2		112,7
		15	16								895		108,1		132,1
		20	21				Pre-charge	1 1/2"			1092		112,6		151,5
180	1	25	26				valve			180	1288		136,7		170,8
		30	31		IV		5/8" UNF	BSP			1485		150,9		190,2
		40	41	375	''	240			375		1878		179,2		228,9
		50 60	51 61								2270 2665		207,4		267,5
		80	81								3450		235,8		306,5
													294,4		383,6
		30	33								983		229,6	302,3	
		40	43	250		180			292		1188		258,3	346,2	
		50	53								1388 1593		283,3	389,0	
		60 80	63 83				Pre-charge			250	1998		315,0 317,7	432,9	
250		100	103		IV			1 1/2"		230	2408		429,1	519,5 607,3	
		120	123				valve	DOD	240		2818		486,5	695,5	
		150	153	350		220	5/8" UNF	BSP	312		3428		571,9	825,5	
		180	183								4038		657,3	966,1	
		100	108,5								1552	643,1		772,5	
		120	128,5	220		405					1762	698,4		841,5	
		150	158,5	220		165	Pre-charge				2072	780,0		942,6	
		180	188,5		IV		_	1 1/2"	406	350	2382	861,4		1036	i
350	1	200	208,5		''		valve			330	2595	916,6		1212,6	
		2550	258,5				5/8" UNF	BSP			3112	1053,4		1282,7	
		300	308,5	350		210					3632	1190,2		1452,7	
		400	408,5							47	4722			1806,7	
		200	226,5								1570	1141,3			
		250	276,5			120					1806	1230,1			
		300	326,5				Pre-charge				2041	1318,2			
		350	376,5	000	IV		valve	2" BSP	500		2276	1407,7			
520	Ш	400	426,5	220			5/8" UNF	_ 501	580	520	2511	1495,4			
		500	526,5			200	J/O UNI				2982	1672,1			
		600	626,5			200					3453	1849,1			
		800	826,5								4395 5337	2204,2			
		1000	1026,5								5551	2558,0			



4.1.9 PISTON POSITION INDICATOR

4.1.9.1 LAST PISTON POSITION SWITCH

 "B..." (No. OF MAGNETIC SWITCH)
"C..." (No. OF MAGNETIC SWITCH)
"D..." (No. OF MAGNETIC SWITCH)



fixed to the piston, and what is known as the trip cam which activates the limit switches. The position of the piston can be monitored at any point, by using the potentiometric transducer T.....

This device is mainly used to switch the pump on and off.

Usually, the piston rod protrudes from the accumulator on the fluid side to (S) or the gas side (U).

On the protruding piston rod version, the hydraulic connection will be on the side if the size of the end cap does not permit otherwise.

The protruding piston rod works in any mounting position. There must however be sufficient space available for the piston to move in and out. The maximum piston speed must not exceed 0.5 m/s over the whole stroke.

4.1f

The electrical magnetic switch usually monitors the max. charged condition of the piston accumulator.

It can, however, also permit the control of the piston position of the last 150 mm (B), or 300 mm (C) or 600 mm (D) when the accumulator is full of oil

The limit switch consists of the switching rod with a permanent solenoid, which is not connected to the piston and can only achieve a limited stroke, and an anti-magnetic housing and two or more switches.

Vertical mounting is preferable due to the friction and possible wear and tear in the rod guide.

The switch is reset by a spring or the force of gravity.

The maximum piston velocity must not exceed 0.5 m/s over the stroke range of the limit switch.

Data of the magnetic switch:

- Output function: normally open

- Operat. Temperature: -25°C + 75°C

- Connection: cable 300 mm in PVC

Electric data character:

- Max switch. voltage contact: 220 - 1500 V

- Max switch. current contact: 1 - 3 A


- Max switch. power contact: 60 - 120 VA

General Character:

- Prot. Degree: IP67

You can require intrinsically safe version for hazardous areas. For this type should, you should add **Ex** to the order code after the number of the magnetic micro-switches.


4.1.9.2 EXIT ROD "S" OR "U"

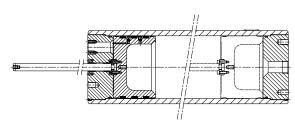

4.1g

The exit rod permits the position of the piston to be monitored over the whole stroke (visual indications). It consists of the piston rod, which is

 4.1.9.3 EXIT ROD AND MECHANICAL SWITCH "S...." (No. OF SWITCH) OR "U...." (No. OF SWITCH)



4.1h

On the exit rod type U or S, you can install mechanical micro-switches. On the standard version are installed mono-stable micro-switches with an exchanging contact. When using a number greater than or equal to three micro-switches, normally are required the bistable double contact ones, so it should be better to indicated the letters B and/or C in the order code after the necessary micro-switches amount:

B = bistable micro-switches

C= bistable micro-switches with double exchanging contact

Data of the mechanical switch:

- Rated operational voltage
- Rated impulse withstand voltage
- Switching overvoltage
- Conventional enclosed thermal current
- Conditional short circuit current
- Protective device
- IP code
- Pollution degree


Wiring:

- Use a lead wire less than 0.75 mm2
- Use a cable from 6 to 9 mm in O.D.
- Do not connect the terminal directly, use crimp terminals and tighten them according to a torque of 0.2 to 0.29 N m. (when connecting NO side, use a crimp terminal with insulation cover).
- Connect a ground terminal. Do not connect the ground terminal directly, use crimp terminals and tighten them according to a torque of 0.39 to 0.59 N \cdot m.
- Only the lead wire may be connected to a terminal.



4.1.9.4 EXIT ROD WITH EXTERNAL TRANSDUCER POSITION AND MECHANICAL SWITCH "S....T4" OR "T20"

4.1i

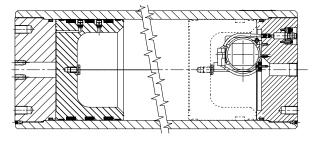

4.1.9.5 WIRE TENSION MEASUREMENT SYSTEM TP

4.1i

In addition to the micro-switches on the exit rod, you can mount a position transducer with an output $4 \div 20 \text{mA}$ or $20 \div 4 \text{mA}$ in order to monitor continuously the entire piston stroke. With the accumulator fully pre-charged with nitrogen and completely charged with oil if you want a 4mA output, you should order the version T4, while, for 20mA, you must order the T20 version.

Technical data:

- Output signal: analogue
- Output: potential-free
- Output current: 4...20 mA or 20...4 mA
- Charge resistance: ≤ 500 OhmSystem resolution: ≤ 0,24A
- Hysteresis: ≤ 4µm
- Reproducibility: system resolution/min. 2 µm
- Frequency of reading position: f standard = 1 kHz
- Maximum deviation from linearity: \pm 100 μm up to a nominal length of 500 mm, \pm 0.02% 500 up to a nominal length of 4000 mm
- -Temperature coefficient: current output: [0.6 μ A/°C + (10 ppm/°C x Px I/L)] x Δ T
- Working voltage: 24 VDC ± 20%
 Current absorption: ≤ 150mA
- Protected against reverse polarity: yes
- Protection against overvoltage: zener protection diodes
- Dielectric strength: 500 V (earth against vessel)
- Working temperature -40...+ 85°C...
- Storage temperature: -40...+ 100°C

Pins:

Output signal

1 = yellow = 4...20 mA - 20...4 mA

2 = grey = 0 V output

3 = pink = 10...0 V

5 = green = 0...10 V

Working voltage

6 = blue= GND

7 = brown = +24 VDC

8 = white = GND

You can require intrinsically safe version for hazardous areas. For this type you should add

Ex. to the order code after the number of the magnetic micro-switches.

Using the wire tension measurement system, the position of the piston can be determined by means of a cable which is fixed to the piston.

The cable is attached to a wheel, which is tensioned by a spring.

This wheel alters an electrical resistance via an attached rotary potentiometer during the piston movement.

This resistance is converted by a transducer into an electrical signal, so that it can be processed directly by a PLC system. The signal is supplied through the end cap via a pressure-tight cable gland.

Alternatively, various digital display units and transmitters can be connected. The max. pressure must not exceed 375 bar.

The piston acceleration is limited to certain values according to measurement system forces, approx. $7\dots30\,g$, and is limited to a max. speed of $0.5\,m/s$. The measurement system is not suitable for rapid volume changes. The piston should preferably be mounted with the gas-side at the top.

 
The cable tension measurement system can only be fitted to the gasside of the piston accumulator.

Technical data

Working temperature: - 20°C + 80°C

Strength: 10 kOhm Linearity: ± 0,25%

4.1.9.6 DISPLAY OR ELECTRONIC CARD



4.1k

To convert the output signal of 10 kOhm, you should install a display type 5714D that, in addition to provide local indication of the position (in mm or litres), converts the signal from the potentiometer to 4-20mA. Moreover on the device you can set 2 intervention thresholds (relays) on the whole piston stroke. Order code: 5714D.

Technical data:

Inlet

Strengthening: $10 \Omega \dots 100 k\Omega$



Output

Display, digit/type: 4 digits / LED Display, digit height LED/LCD: 13.8 mm/ MA, signal range /min. range: 0...20 mA / 16 mA

Relays: 2 x SPDT, AC: 500VA

Approvals

UL: UL 508

Det Norske Veritas, Ships & Offshore: Stand. F. Certification 2.4

Features:

Power supply: universal AC/DC 2-wire power supply: >15 VDC Programmable: FKP/PCF

Ambient temperature: -20...+ 60°C

Supply voltage, uni. AC/DC: 21.6...253V /19.2... 300V

Consumption: 3.5 W

Insulation voltage, test/op.: 2.3 kVAC/250VaC

Response time: < 400 ms/<1 s Base accurancy. MA: $< \pm \mu A$ Protection degree, front: IP65 Assembly: panel of 48x96 mm

Otherwise, you can use an electronic card for DIN rail mounting for signal conversion from potentiometric to 4 to 20mA + 2 relays. Order code: con-

verter 4116. Mini front indicator: 4501

Technical data:

Inlet

r.lin., measurement range / min. range: $0....10000\Omega$

MA, signal range /min. range: 0...20mA / 16mA

Ma, max. charge: $20 \text{ mA} / 800 \Omega$

V, signal range /min. range: 0....10VDC/ 0.8 VDC

Relais: 2 x SPST, AC:500 VA

Approval

UL: UL 508

FM: AIS/1/2/ABCD/IIC

Det Norske Veritas, Ship & Offshore: Stand.f. Certification 2.4

Features

Power supply: universal AC/DC

Reference voltage/ power supply 2 wires: - / 16 VDC

Insulation: inlet/output/power supply

Channels: 1

Technical features

Programmable: FKP/PCF

Ambient temperature. -20...+ 60°C

Supply voltage, uni. AC/DC: 21.6...253V /19.2... 0.300V

Consumption: 2.5 W


Insulation voltage: 2.3 kVAC/250VAC

Unit to be programmed: 4501 front indicator (to be ordered separately)

Response time: < 400 ms Signal dinamics, inlet: 24 bit Base accurancy, mA: $< \pm \mu A$

Assembly: DIN bar

4.1.9.7 MAGNETIC FLAG INDICATOR W

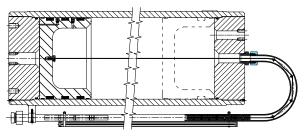

With the magnetic flags indicator, the position of a piston can be determined by the colour (white/red) of a set magnetic flags which turn when the piston moves and which are visible externally.

A non-magnetic tube is fitted to the piston accumulator containing a cable, one end of which is fastened to the gas side of the piston and the other end is attached to a magnet.


Along the length of the piston accumulator, it is also fitted a housing which contains red/white magnetic flags.

When the magnet moves up or down its tube, the flaps turn to their opposite colour to indicate the piston's position.

When the piston moves towards the gas side, the indicator moves to the direction of the oil-side.

The maximum piston speed must not exceed 0.5 m/s. Piston accumulators with magnetic flag indication must only be installed vertically, gasside at the top.


4.1.9.8 EXTERNAL MAGNETIC TRANSDUCER POSITION MOUNTED ON STAINLESS STEEL PIPE "AT4" OR "AT20"

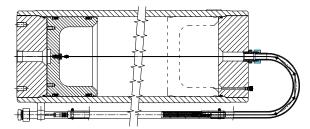

4.1m

For technical data, see Chap. 4.1.9.4

4.1.9.9 MAGNETIC SWITCH MOUNTED ON STAINLESS STEEL PIPE "A (No. OF MAGNETIC SWITCH)"

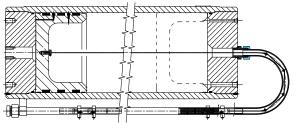


4.1n

For technical data, see Chap. 4.1.9.1




4.1.9.10 EXTERNAL MAGNETIC TRANSDUCER POSITION AND MAGNETIC SWITCH "A..." (No. OF MAGNETIC SWITCH T4 or T20) MOUNTED ON STAINLESS STEEL PIPE

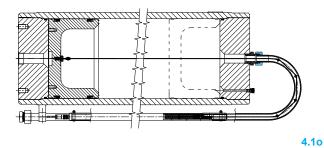


For technical data, see Chap. 4.1.9.1 and 4.1.9.4

4.1.9.11 MAGNETIC FLAG AND MAGNETIC SWITCH "W..." (No. OF MAGNETIC SWITCH) MOUNTED ON STANLESS STEEL PIPE

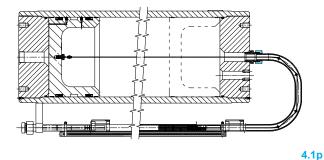


For technical data, see Chap. 4.1.9.1 and 4.1.9.7

4.1.9.12 MAGNETIC FLAG INDICATOR AND MAGNETIC TRANSDUCER "W T4 or W T20" MOUNTED ON STANLESS STEEL PIPE

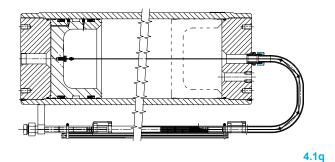

For technical data, see Chap. 4.1.9.4 and 4.1.9.7

 
4.1.9.13 MAGNETIC FLAG, EXTERNAL MAGNETIC TRANSDUCER POSITION AND MAGNETIC SWITCH "W..." (No. OF MAGNETIC SWITCH) "T4" or "T20" MOUNTED ON STANLESS STEEL PIPE



4.1r

For technical data, see Chap. 4.1.9.4 and 4.1.9.7

 4.1.9.14 ULTRASONIC TRANSDUCER



4.15

The piston position is determined by ultrasonic measurement. It is only possible to take the measurements from the fluid side, because a continuous sound carrier medium is required for ultrasound. In order to eliminate false readings, the fluid must be as free of air bubbles as possible. The piston should be mounted so that no air can be collected under the sensor.

The measurement data is evaluated by a microprocessor and is converted into a continuous measurement signal. It is possible to take the intermediate measurement results to switch system parts; i.e. turning the pump on and off.

The most important features of the system are:

· Protection class:

IP65 according to DIN40050

- LCD display
- · Outputs:
- 5 floating relay change-over switches (with 125 V, 1A rating), of which 1 is error output and 4 are user-adjustable switching thresholds between 0 and 100%
- 4 20 mA


The maximum pressure for the sensor must not exceed 350 bar.

4.1.10 ACCESSORIES

For clamps, see Chap. 7
For safety blocks, see Chap. 9
For pre-loading and charging set, see Chap.11
For pulse damper adapters, see Chap. 12.1



4.1.11 SPARE PARTS CODE

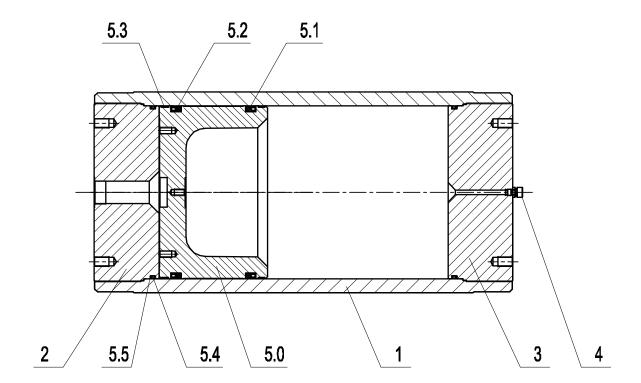

4.1t

Pos.	Spare parts	Cylinder diameter	Group code	Q.ty	Part description	Гуре / Code	
1					Accumulator cylinder		
2		Not supplied as spare p	arts		Oil side cap		
3					Gas side cap		
4			2072	1 1	Gas filling valve	" UNF	
5.1		T	2072	- 	cus minig varve	0111	
5.2				2	Gasket	948359	
5.3	Accumulator		2471**/***	2	Piston guide	11389	
5.4	Gaskets set		2471 /	2	O-ring	OR 6200-*	
5.5		60		2	Anti-extrusion ring	8-329	
5.0		\dashv		1	Piston	11495-1	
5.1	Piston with			<u> </u>	FISTOIT	11495-1	
5.2	Gaskets		2477**/***	2	Gasket	948359	
	Gaskets			2			
5.3				_	Piston guide	11389	
5.1				1	Gasket - gas side	11518-*G	
5.2	Accumulator		2.472**/***	1	Gasket - oil side	11518-*L	
5.3	Gaskets set	1	2472**/***	2	Piston guide	11523	
5.4		100		2	O-ring	OR 185-*	
5.5		100		2	Anti-extrusion ring	8-341	
5.0	S			1	Piston	11496-10	
5.1	Piston with		2478**/***	1	Gasket - gas side	11518-*G	
5.2	Gaskets			1	Gasket - oil side	11518-*L	
5.3				2	Piston guide	11523	
5.1				1	Gasket - gas side	11524-*G	
5.2	Accumulator			1	Gasket - oil side	11524-*L	
5.3	Gaskets set		2473**/***	2	Piston guide	11526	
5.4	Gusileus set			2	O-ring	OR 228-*	
5.5		180		2	Anti-extrusion ring	8-439	
5.0					1	Piston	11497-10
5.1	Piston with		2479**/***	1	Gasket - gas side	11524-*G	
5.2	Gaskets		24/9/	1	Gasket - oil side	11524-*L	
5.3				2	Piston guide	11526	
5.1				1	Gasket - gas side	11527-UG	
5.2	Accumulator			1	Gasket - oil side	11527-UL	
5.3	Accumulator Gaskets set		2474**/***	2	Piston guide	11529	
5.4	Gaskets set			2	O-ring	OR 81300-*	
5.5		250		2	Anti-extrusion ring	8-455	
5.0				1	Piston	11498-10	
5.1	Piston with		2480**/***	1	Gasket - gas side	11527-*G	
5.2	Gaskets		2480^^/^^	1	Gasket - oil side	11527-**L	
5.3		1		2	Piston guide	11529	
5.1				1	Gasket - gas side	11566-*G	
5.2	1			1	Gasket - oil side	11566-*L	
5.3	Accumulator		2475**/***	2	Piston guide	11562	
5.4	Gaskets set			2	O-ring	OR 81300-*	
5.5	1	350		2	Anti-extrusion ring	8-455	
5.0		7		1	Piston	11499-10	
5.1	Piston with	1		1	Gasket - gas side	11566-*G	
5.2	Gaskets		2481**/***	1	Gasket - oil side	11566-*L	
5.3				2	Piston guide	11562	
5.1		†	 	1	Gasket - gas side	11981-*G	
5.2				1	Gasket - oil side	11981-*L	
5.3	Accumulator	1	2476**/***	2	Piston guide	11964	
5.4	Gaskets set	1	1 2.,,,	2	O-ring	OR 82000-*	
5.5		520		2	Anti-extrusion ring	8-469	
5.0		\dashv		1			
	Distan With			-	Piston	11962	
5.1	Piston with	1	2482**/***	1	Gasket - gas side	11981-*G	
5.2	Gaskets	1		1	Gasket - oil side	11918-*L	
5.3				2	Piston guide	11964	

^{*} gasket material - ** gasket material - caps - *** gasket material - piston



4.1.12 REPAIR TOOL

The sleeve equipment to re-assemble the piston accumulators is necessary every time an accumulator needs to be disassembled for maintenance

(For example, when replacing piston seals) and then re-fit the piston into the accumulator.

4.1.12.1 ORDER CODE

Nominal diameter	Sleeve order code Simple sleeve with screew						
60	11555	1					
100	11556	1					
180	11557	2483					
250	11558	2484					
350	11559	2485					
520	11554	2486					

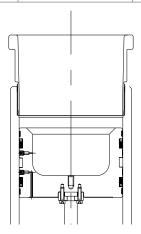


Fig. Simple slee

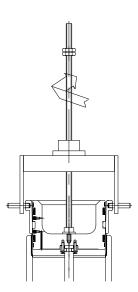


Fig. Sleeve with screw

4.1.13 COMMISSIONING AND MAINTENANCE

Installation

Piston accumulators are delivered pre-charged with nitrogen at a pressure of 30 bar or at value of pressure required at time of order.

The pre-charge value is also on the nameplate of the accumulator. Depending on the size and quantity ordered, the piston accumulators are shipped in boxes, in cartons, on pallets or wooden boxes on request. Unless otherwise required, certificates and documentation are provided together with the accumulators.

The original packaging is suitable for handling and general storage. Where necessary, you should use suitable lifting equipment to support the weight of the accumulators.

However protect from impact, the packaging and handle it with care.

Storage

During storage in the warehouse, leave the product in its original packaging, keeping it away from heat sources and naked flames. The storage temperature should be between +10 and +40°C.

After six years of storage, it is essential to proceed with the replacement of all elastomeric parts before the commissioning.

Marking on the nameplate of the accumulator

With reference to the PED 97/23/EC classification, Article 3, Paragraph 3 and / or risk categories I or II depending on the volume and maximum working pressure, the accumulator indicates the following data:

- Logo, name and country of the manufacturer
- Month/year of production
- Product code

4.1v

- Serial number
- Maximum PS pressure and PT test pressure in bar
- Min. and max. TS working temperature in Celsius
- Volume V in litres
- Group of fluids allowed (II)
- CE marking (for volume greater than 1 litre) with the identification number of the notified body
- Pre-charge pressure in bar

It is strictly forbidden to:

- weld, rivet or screw any item of the accumulator
- engrave or permanently stamp the surfaces of the accumulator shell and / or carry out other operations that could affect or change the mechanical properties of the accumulator
- use the accumulator as a structural element; it should not be subjected to stresses or loads
- change the data of the nameplate and / or accumulator without the permission of the manufacturer
- use a (dangerous) fluid of Group 1 with equipment designed and manufactured for fluids of Group 2.

Before installation, you must perform a visual check to verify that the accumulator has not suffered any damage during shipping / handling. Verify that the requested type matches with what stamped on the nameplate. We recommend using the accumulator with a suitable security valve (see Chapter 8) or a security block type BS (see Chapter 9). This

4.1z



device provides user and equipment protection against possible damage caused by pressure surges and also makes the maintenance of the accumulator easier, facilitating the interception and the discharge.

Provide for a space of 200 mm above the gas pre-charge valve to allow access to and control of the pre-charge equipment (see Chap.11.1).

The accumulators type AP may be installed in any position from horizontal to vertical (preferably with the pre-charge valve at the top), and the nameplate must be visible.

Proceed to the assembly so that no abnormal force affects the pipes connected directly or indirectly to the accumulator, so we recommend the use of supporting components and also fastening (please see Chapter 7) to avoid the transmission of vibrations.

If are not used EPE safety blocks, make sure that the accumulator is connected to the hydraulic circuit by suitable connection devices.

Make sure the fluid is compatible with the seals installed. Check that the max. allowed accumulator pressure is equal to or greater than that of the hydraulic circuit and that the temperature during operation is maintained within the range expected.

Make sure the fluid does not contain contaminants and/or abrasive.

Pre-charge of nitrogen

Normally, the piston accumulators are delivered pre-charged with pressurized gas. The pre-charge of gas can be controlled and / or adjusted before or after installation of the accumulator in the hydraulic circuit. For the pre-charge, use only industrial dry nitrogen with a purity of min. 99%. It is important to use the nitrogen from a bottle equipped with a pressure reducing valve (see Chap.11.3). Use the EPE pre-charge and charging set type PC to check the charging pressure required, and adjust if necessary. If the pre-charge pressure is lower than required, connect the charging hase on one side and the other side connect it to the nitrogen bottle or to the pressure reducer. Slowly fill the nitrogen in the accumulator until reaching a pressure slightly higher than that set value (+ 10

Close the bottle and remove the charging hase from the pre-loading set; wait until the gas temperature has stabilized (2 hours) and calibrate the pressure, discharging the excess gas.

Make sure that the gas valve is not subject to losses and, if necessary, use soap and water. Tighten the protective caps manually.

Hydraulic pressurization

- Check that the pre-charge pressure is adequate for the application
- Ensure that the hydraulic pressure never exceeds the max. allowed pressure (PS) shown on the accumulator shell.

To avoid this risk, use a safety device (see Chap. 9).

Maintenance

Accumulators must be regularly examined, checked for general condition and maintained on a periodic basis. The frequency and extent of inspection required will depend on application. Epe recommends to check the accumulator after one year, whichever occurs first.

Examination

Shall consist of visual check of the physical integrity of the equipment and, where applicable, a functional test.

Repair kits are available for all accumulator models; replacement of the piston seals is generally the only maintenance operation required. Replacement of other seals on end caps and the gas valve is also recommended. Periodic checking of the pre-charge pressure will provide early warning of deteriorating piston seal performance.

If pre-charge pressure is low, check also for gas valve and/or end cap seal leakage. Allowing for temperature difference, if any, the pre-charge pressure will rise if fluid collects in the gas side and will drop if gas leaks into the fluid side or past gas end cap seals. It is suggested to carry out a check a week after the installation and thereafter once every three months or at intervals determined by the Manufacturer.

Disassembling AP piston accumulators removing the accumulator from a hydraulic system

- Shut down the hydraulic system and make sure that the hydraulic pressure at the accumulator is zero. In this condition, the piston will be bottomed at the hydraulic end.
- Remove the mounting screws or release the clamp(s) and remove the accumulator from the hydraulic system. Threaded holes in the hydraulic cap may be used to connect the lifting equipment or a rape may be used around the tube.

If a gas bottle is connected to the accumulator, make sure that it is discharged before disconnecting the accumulator.

Disassembling an AP accumulator



Gas pressure should always be discharged before the disassembly of an accumulator AP. Those accumulators have the oil and gas end caps threaded into the pipe. Always remove the gas cap first – identifiable by the gas valve or by a gas bottle connection.

- Place the accumulator horizontally and hold it down with a strap wrench or in a vice. When disassembling the larger accumulators, it is recommended to work with the accumulator in the vertical position.
- Unscrew the gas valve. Remove and discard the O-ring.
- To remove the gas end cap, fit screws into the tapped holes in the cap, then, using a long bar working against screws, unscrew the cap from the tube. When removing the end caps from the larger accumulators, it is recommended that the weight of the cap is supported by a hoist and sling.
- Remove the O-rings and parbak ring from the gas end cap, taking care not to damage the grooves.
- Repeat the two last steps for the hydraulic end cap.
- Remove the piston by pushing it away from the hydraulic end with a soft-faced bar. Never try to remove the piston by applying compressed

PISTON ACCUMULATORS



air to the opposite end.

- Remove the seals from the piston and the PTFE bearing rings

Cleaning

Thoroughly clean and dry the metal parts and clean the bore of the tube with clean, lint-free cloth.

Inspection

Inspect the piston for cracks, burrs around O-ring grooves, or damage. Examine the bore of the tube for scratches or scoring, using a lamp. Inspect the end caps for damaged threads or burrs on O-ring grooves.

Reassembly



Coat all internal parts with clean hydraulic fluid before reassembly. In order to protect the piston seals and for ease assembly purposes, the use of a loading sleeve is recommended – details of a suitable loading sleeve can be provided by Epe. To minimize the risk of damage to the piston and seals, it is recommended that the replacement piston assembly should be installed with the accumulator pipe positioned vertically.

Piston



- Lubricate and fit new seals and PTFE bearing rings. For inserting the piston into the body, the weight of the piston must be supported with a rape, taking care not to damage the seals or to introduce contamination when the piston enters the loading sleeve.
- Lubricate the piston and insert it, plain end first, into the loading sleeve positioned at the gas end of the pipe.
- Using a clean hammer and block, tap the piston into place



End Caps





The O-ring and parbak ring, fitted to the accumulator end caps, have a flat face and a concave face to allow the ring and the parbak ring seaying correctly.

Hydraulic end cap

- Lubricate and install a new parbak ring in the groove in the hydraulic end cap, with its concave surface facing the inner end of the cap.
- Lubricate and fit a new O-ring on the concave face of the parbak ring.
- Lubricate the threads of the end cap and insert them into the pipe, facing the plain (hydraulic) side of the piston. Care should be pay not to scrape the O-ring over the pipe threads.
- Tighten the end cap using a bar against the screws threaded into the holes of the cap. When fully tight, the end cap will abut against the chamfer leading into the honed bore; extreme tightness is not required as sealing is achieved by the O-ring. The cap should not protrude beyond the end of the accumulator pipe by more than 1mm.

Gas end cap

- Repeat the instructions above for the hydraulic gas end cap. The gas end cap, when fitted, will face the dished side of the piston.
- For accumulators with a gas valve, lubricate and fit a new O-ring to the gas valve, thread the valve into the gas end cap and torque tighten to 30 + 5 Nm. Refit the gas valve cap.

Installation

Remount the accumulator and connect it to the hydraulic system, then pre-charge it.

Pre-charge

- Screw the pre-charge PC equipment on the gas valve.
- Connect the equipment to the nitrogen bottle or to the pressure reducer with the charging hase.
- Slowly enter the nitrogen in the accumulator until reaching a pressure slightly higher than the set value (+ 10 ÷ 15%).
- Close the bottle and remove the charging hase from the PC equipment.
- Wait until the gas temperature has stabilized (2 hours).
- Calibrate the pressure discharging the excess gas.

Demolition and recycling of the accumulator

Before accumulator demolition or recycling, you should always discharge completely the pre-charge pressure and remove the gas valve. If you need, proceed decontaminating in relation to the fluid used prior to demolition.

Reproduction is forbidden.

In the spirit of continuous improvement, our products may be changed.